

# ELEVATOR FIRE SERVICE TESTING INSTRUCTIONS

## PHASE I FIRE SERVICE KEYSWITCH — IN HALL

Turn keyswitch in the hall to ON, Elevator will . . .

1. Proceed to Designated level
2. In-Car buzzer and return jewel will activate


When the car arrives at the Designated Level the doors will park open and the buzzer and return jewel will turn off.

*For your information — When Phase I Operation is Activated:*

- Car and Hall calls are cancelled
- Hall Lanterns and gongs, photo-eyes, and door hold open switches are disabled
- Position indicators and safety edges remain active
- In-car stop switch and door open buttons are disabled as soon as doors close and car starts to move.



## PHASE II FIRE SERVICE KEYSWITCH — IN THE ELEVATOR CAR

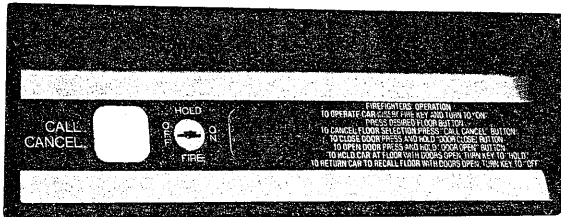

### Phase II Car Operation

1. Enter car and turn key in Fire Service keyswitch ON.
2. Push-And-Hold "CLOSE DOOR" button until doors are closed.
3. Push desired Floor pushbutton.
4. After arriving and stopping at desired Floor, Push-And-Hold the "DOOR OPEN" button until doors are fully opened.
5. Test the "HOLD" keyswitch position — turn key to "HOLD" and remove it. The doors will remain open and car will remain at desired level.
6. To return to designated level: With doors open — turn key to "OFF" position.
7. Return elevator to normal operation — turn Hall Fire Service keyswitch to BYPASS, pause momentarily, then turn the keyswitch to OFF.

*For your information — When Phase II Operation is Activated:*

- Power operated doors will only respond to constant pressure on DOOR OPEN and DOOR CLOSE buttons
- CALL CANCEL button will cancel all car calls immediately
- With Phase II keyswitch in the HOLD position — the DOOR CLOSE button will be inoperative